

DOOR AND FRAME PREPARATION TEMPLATE INSTRUCTIONS

<p>1 POSITION TEMPLATE</p> <p>Cut template where indicated. Fold enclosed latch template on dotted line and locate on door at desired height. If door is beveled (See Diagram A). Place folded edge on shorter side of bevel as shown above. Tape latch template in place.</p>	<p>2 MARK DOOR</p> <p>Mark appropriate drill points on door to correspond with points on latch template.</p>	<p>3 DRILL 2-1/8" FACE BORE</p> <p>Using 2-1/8" dia hole saw, drill perpendicular to door and drill through.</p>	<p>4 DRILL EDGE BORE</p> <p>Using 1" drill bit, drill perpendicular to door and drill through.</p>	<p>5 INSTALL STRIKE - WOOD FRAME</p> <p>Mortise door frame and install strike.</p>	<p>6 INSTALL STRIKE - METAL FRAME</p> <p>Surface mounted strike Prep door frame and install strike</p>
--	--	--	--	--	--

HARDWARE INSTALLATION

<p>1 INSTALL LATCH / FACEPLATE</p> <p>Place spring latch/faceplate unit in door making sure bolt bevel faces direction of door closing. Install latch and loosely fasten with two (2) wood screws. Verify that the outer face of the faceplate is flush to door.</p>	<p>2 INSTALL LEVER ASSEMBLIES</p> <p>Right Hand Shown, Viewing From Inside</p> <p>Install outside lever assembly by aligning posts with corresponding posts of inside lever assembly. Attach inside knob assembly by fastening two (2) screws.</p>	<p>3 INSTALL ROSES</p> <p>Install inside and outside roses.</p>	<p>4 INSTALL PRIVACY PIN (* FOR PRIVACY SET ONLY)</p> <p>(Inside) For inside view: Insert and thread privacy pin into inside rose. (Outside) For outside view: Insert emergency access tool - as perpendicular to the door as possible - until contact with the privacy pin is made. Push to disengage privacy pin. Withdraw and save for future use.</p>
--	--	---	---