


1160 SERIES LADDER PULLS FOR E-MOUNTING

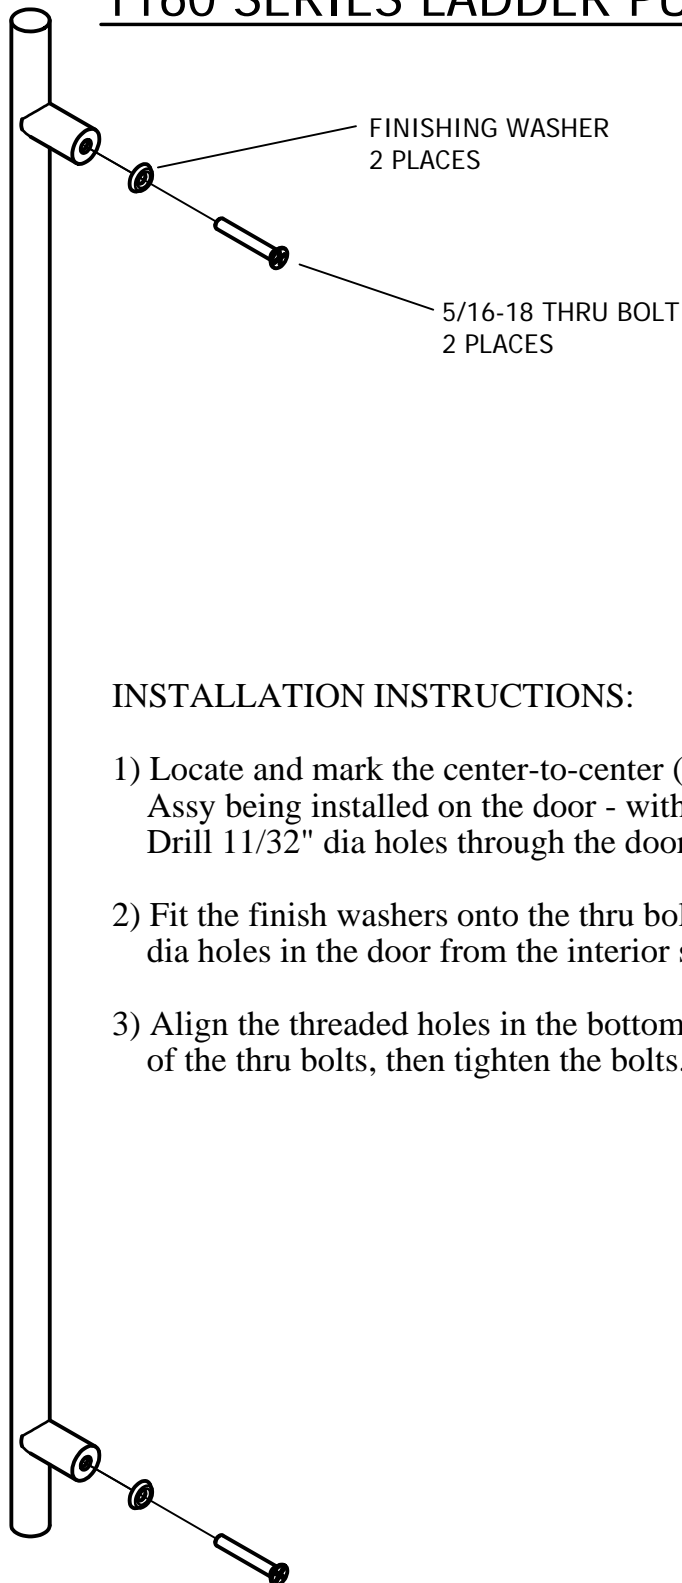

INSTALLATION INSTRUCTIONS:

- 1) Locate and mark the center-to-center (CTC) distance of the 1160 Series Assy being installed on the door - with attention to all applicable Codes. Drill 11/32" dia holes through the door at the marked locations.
- 2) Fit the finish washers onto the thru bolts, then slip the bolts through the 11/32" dia holes in the door from the interior side.
- 3) Align the threaded holes in the bottoms of the Standoffs with the protruding ends of the thru bolts, then tighten the bolts.