


# 1160 SERIES LADDER PULL FOR G-MOUNTING

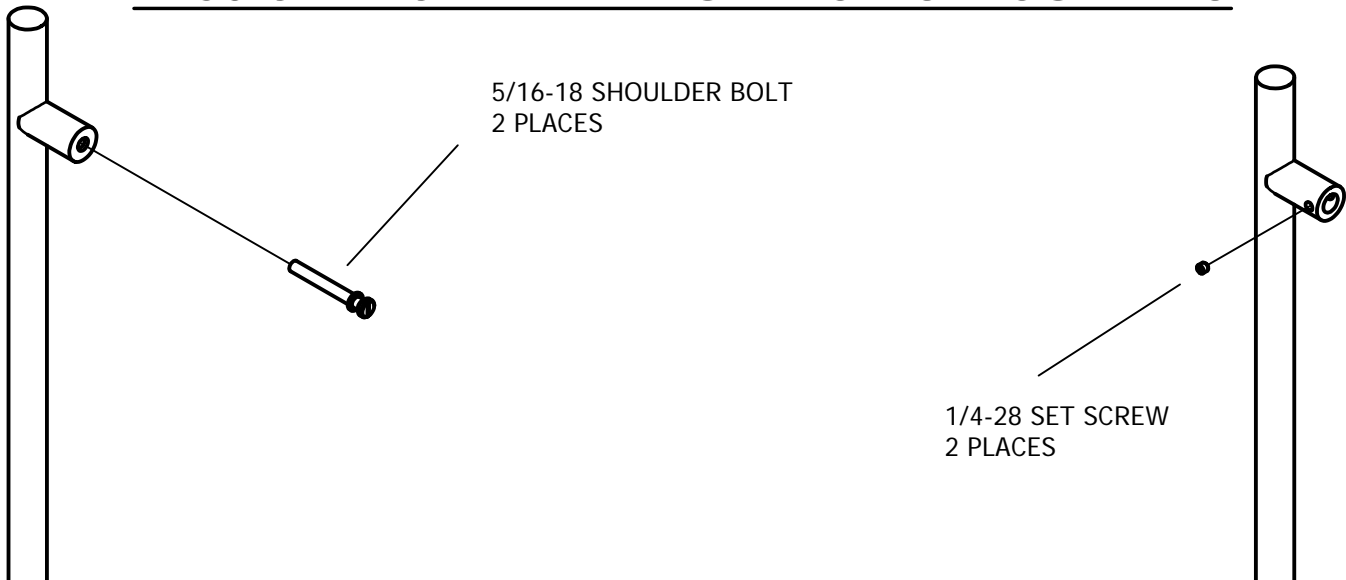

5/16-18 SHOULDER BOLT  
2 PLACES

1/4-28 SET SCREW  
2 PLACES

## INSTALLATION INSTRUCTIONS:

- 1) Locate and mark the center-to-center (CTC) distance of the 1160 Series Assy being installed on the door - with attention to all applicable Codes. Drill 9/32" dia holes for 1160/1160-1/1163/1163-1 and 11/32" dia holes for all other configurations through the door at the marked locations.
- 2) Slip the bolts through the 9/32" dia holes for 1160/1160-1/1163/1163-1 and 11/32" dia holes for all other configurations in the door from the interior side.
- 3) Align the threaded holes in the bases of the Standoffs of the external 1160 Series Assy with the protruding ends of the shoulder bolts, then tighten the bolts.
- 4) Fit the counter-bored holes in the bases of the Standoffs of the internal 1160 Series Assy over the heads of the shoulder bolts, then thread-in and tighten the 1/4-28 set-screws using a hex (allen) wrench. Installing these screws wet with a non-permanent, medium strength Threadblocker (such as Permatex 24250) will greatly enhance screw retention.

DOOR EXTERIOR

DOOR INTERIOR