


DOOR PREP:

1. DRILL Ø3/8" HOLES, (HANDLE CENTER) DISTANCE APART.
2. INSTALL PUSH PLATE THROUGH HOLES.
3. HOLD PULL PLATE OVER HOLES AND INSERT MOUNTING POSTS THROUGH PULL PLATE THEN DOOR.
4. THREAD FBTB50007 BOLTS INTO PUSH PLATE.
5. MOUNT HANDLE ON POSTS USING FOUR (4) SUPPLIED SET SCREWS.

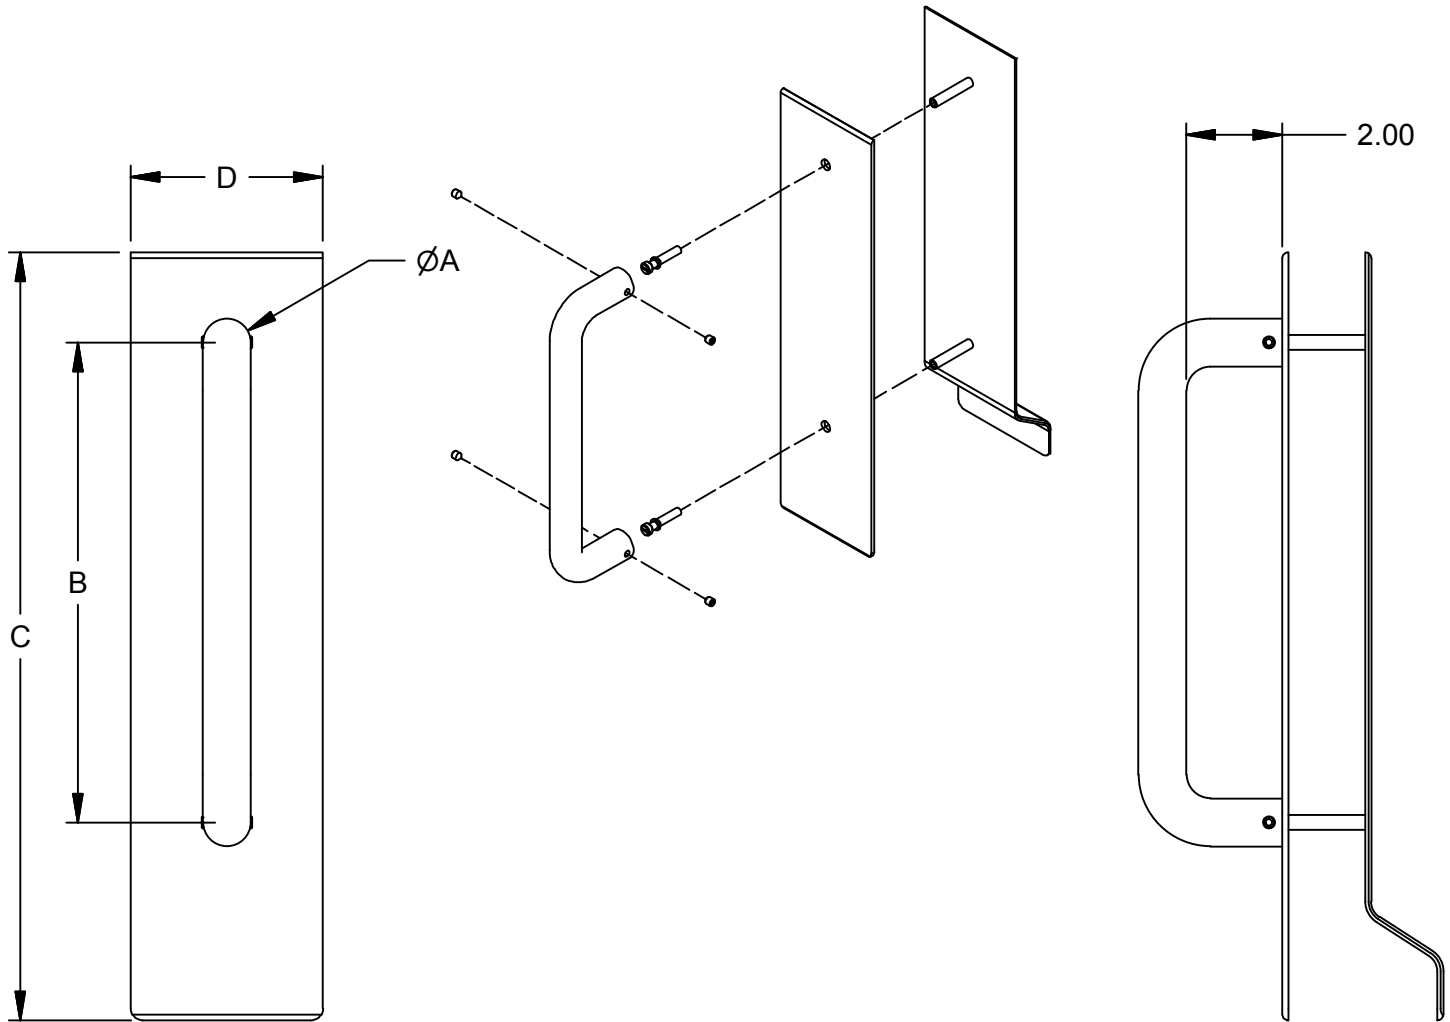

PART NUMBER	DIM A DIA	DIM B	DIM C	DIM D
1896-4B	1"	10"	16"	4"