
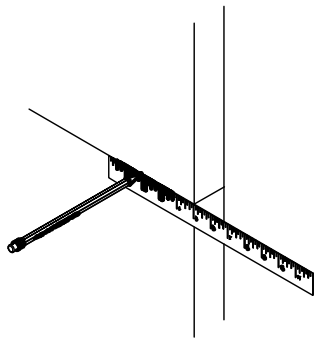
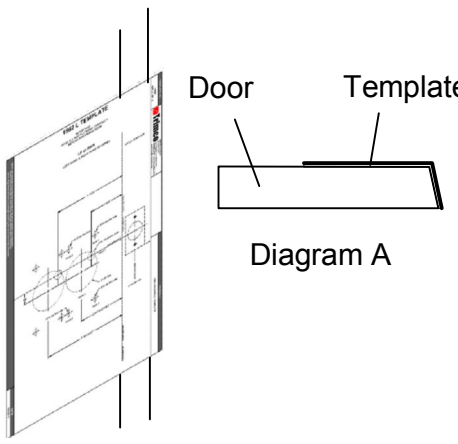
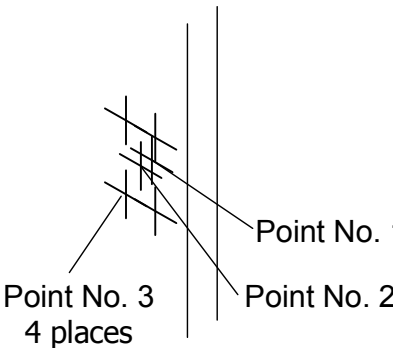
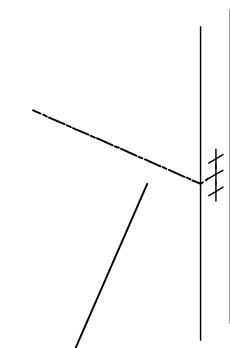
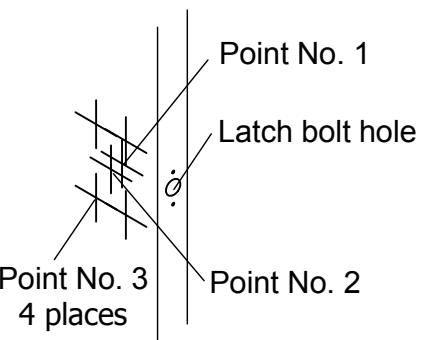
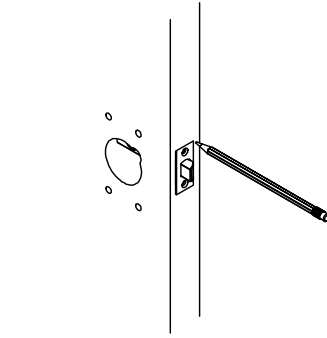
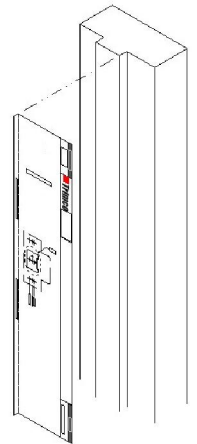
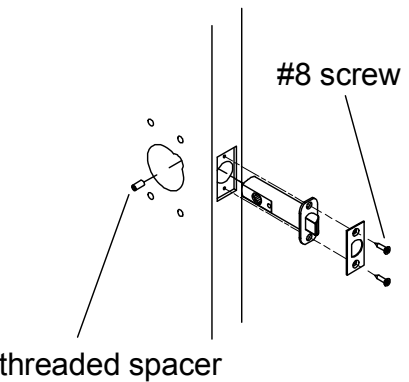
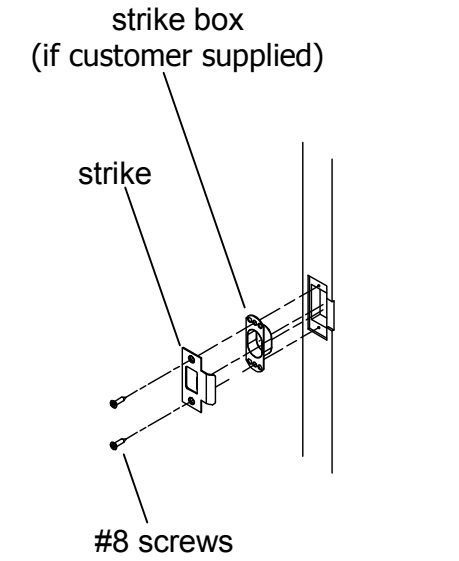
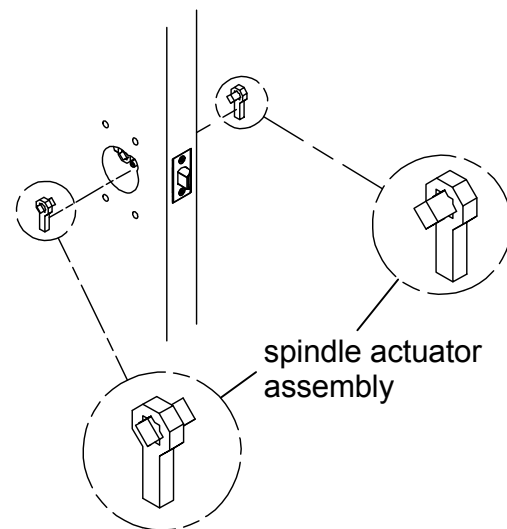
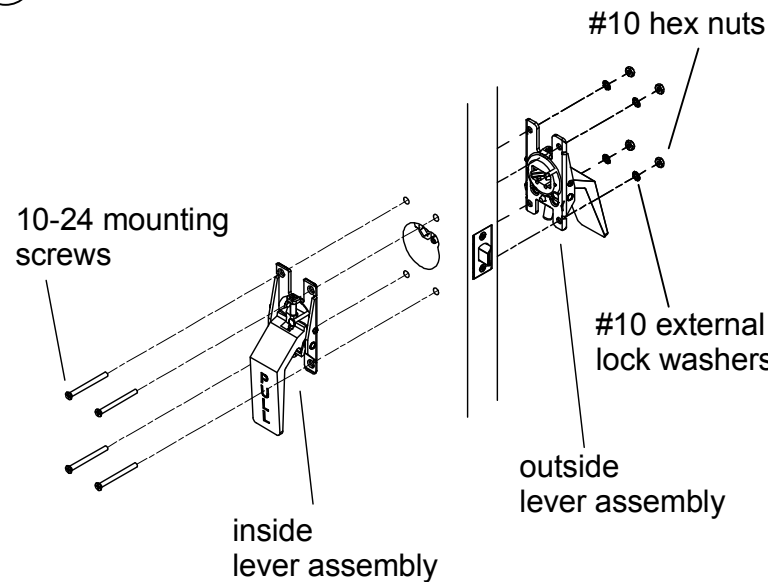


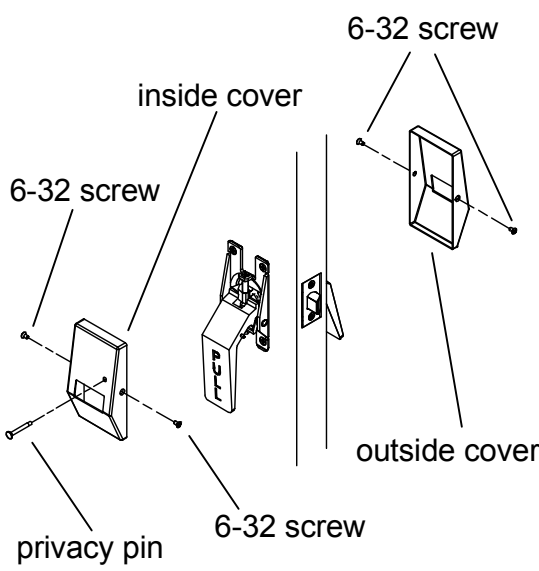

WOOD DOOR AND WOOD FRAME PREPARATION/TEMPLATE INSTRUCTIONS (METAL DOORS/METAL FRAMES SHOULD BE PRE-PREPARED)

<p>1 MARK DOOR HEIGHT</p>  <p>Draw a horizontal line on both sides of the door to indicate desired height of lever, (45" above floor suggested unless otherwise directed).</p>	<p>2 POSITION TEMPLATE</p>  <p>Fold (or cut if desired) enclosed latch template on dotted line. Align the line just marked on the door with the latch centerline which is on the latch/lever assy template. Tape template to door.</p>	<p>3 MARK DOOR</p>  <p>Mark appropriate drill points on door to correspond with points on latch/lever assy template.</p>	<p>4 DRILL EDGE BORES</p>  <p>Using mortise tool and a 1" bit, mortise for latch to depth of 4-1/4".</p>	<p>5 DRILL FACE BORES</p>  <p>Using 3/4" dia hole saw drill at Point 1 perpendicular to door and drill through. Using a 2 1/8" dia hole saw drill through at point 2. Using 5/16" dia drill bit drill through at point 3 (4 places). Using 1" dia hole saw drill latchbolt hole to a depth of 4 3/8" for 2 3/4" backset, or 6 5/8" for 5" backset.</p>	<p>6 MORTISE AND POSITION FACEPLATE</p>  <p>Slide latch into mortise. Check that screw mounting points are centered before tracing the outline of the faceplate. Chisel for faceplate to a depth of 5/32".</p>	<p>7 PREPARE FRAME</p>  <p>Tape strike template at matching centerline to latch template. Mark points. Position strike over frame and trace outline. Using 1" drill bit, Drill latch depth to 1-1/8" deep. Chisel out strike plate to a depth of 7/64".</p>
--	--	---	--	--	--	---

INSTALLATION INSTRUCTIONS

<p>1 INSTALL LATCH</p>  <p>Place latch bolt unit in door, Making sure bolt bevel faces direction of door closing. Attach front with 2 (two) #8 screws. Install threaded spacer into latch.</p>	<p>2 INSTALL STRIKE</p>  <p>Install strike and strike box (if customer supplied) using two (2) #8 screws. (3651 "B" strike shown)</p>	<p>3 INSTALL SPINDLES AND PUSH/PULL ACTUATORS</p>  <p>Install spindles and actuators as required by function. (Not provided for fixed or rigid handles)</p>	<p>4 INSTALL LEVER ASSEMBLIES</p>  <p>Install lever assemblies by aligning screws of inside lever assembly with corresponding holes in door. Verify handing for each assembly before mounting. Align lever assemblies and fasten with four (4) 10-24 mounting screws, four (4) external lock washers and four (4) hex nuts.</p>	<p>5 INSTALL COVERS</p>  <p>Install covers and fasten with 6-32 screws. Insert privacy pin through inside cover and thread into place.</p>
--	--	--	---	--

NOTE: This template is provided for use only on the job for which it was requested. Trimco reserves the right to make design changes without notice. Trimco will not be responsible for errors or damage caused by the use of out-of-date templates.

REVISION RECORD:
MODIFIED STEPS 2 THRU 5, CHANGED TITLE: 1562L PUSH/PULL LATCH ASSY INSTALLATION INSTRUCTIONS
WAS: 1562L/HL PUSH/PULL LATCH ASSY INSTALLATION INSTRUCTIONS, SGH/JG, 06/10/15
MODIFIED STEPS 1, 2 & 3 OF WOOD AND METAL DOOR PREPARATION INSTRUCTIONS, SGH/JG, 09/08/15

DATE

09/08/15