



## 1170 SERIES LADDER PULL FOR E-MOUNTING

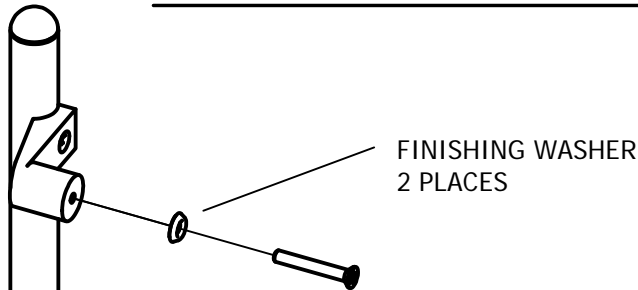

FINISHING WASHER  
2 PLACES

5/16-18 THRU BOLT  
(FOR 1171, 1172, 1174, 1175,  
1171-1, 1172-1, 1174-1, 1175-1)  
2 PLACES  
1/4-20 THRU BOLT  
(FOR 1170, 1173, 1170-1, 1173-1)  
2 PLACES

### STANDARD INSTALLATION CONFIGURATION

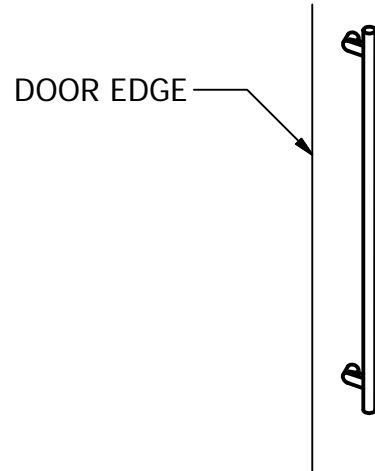

### INSTALLATION INSTRUCTIONS:

- 1) Locate and mark the center-to-center (CTC) distance of the 1170 Series Assy being installed on the door - with attention to all applicable Codes. Drill 9/32" dia holes for 1170/1173/1170-1/1173-1 and 11/32" dia holes for all other configurations through the door at the marked locations.
- 2) Fit the finish washers onto the thru bolts, then slip the bolts through the 9/32" dia holes for 1170/1173/1170-1/1173-1 and 11/32" dia holes for all other configurations in the door from the interior side.
- 3) Align the threaded holes in the bottoms of the Standoffs with the protruding ends of the thru bolts, then tighten the bolts.

