


INSTALLATION INSTRUCTIONS:

1. OUR STANDARD 1069FP ASSEMBLY WILL WORK WITH A FRAME/WALL OF UP TO 5 1/2" WIDTH - CUSTOMIZED ASSEMBLIES CAN BE MADE FOR WIDTH'S RETURN GREATER THAN 5 1/2".
2. TO DETERMINE THE HANDING FOR OUR 1069FP ASSEMBLY, REFER TO SHEET 3.
3. TO ADJUST THE RESISTANCE TO LOCK/UN-LOCK:




TURN SET-SCREW CW - USE 3/16" HEX KEY (ALLEN WRENCH) TO INCREASE RESISTANCE TO LOCK/UNLOCK

TURN SET-SCREW CCW - USE 3/16" HEX KEY (ALLEN WRENCH) TO DECREASE THE RESISTANCE TO LOCK/UNLOCK

4. PREPARE DOOR AND FRAME AS INDICATED ON SHEET 2.
5. INSERT DOOR PULL AND INSTALL USING QUANTITY FOUR (4) #8X1-5/8" FH PH DRYWALL SCREWS (SUPPLIED)
6. INSTALL STRIKE USING TWO (2) #8X3/4" FH WS (SUPPLIED) THEN TEST UNIT.
7. INSTALL LOCK/UNLOCK DECAL AS SHOWN.
8. INSTALL SLIDE DECALS AS SHOWN (SEE SHEET 3)

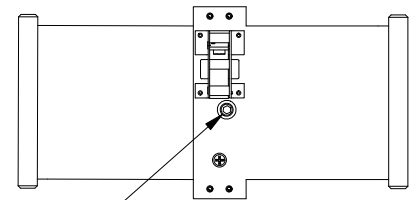**LH SHOWN
BACK VIEW**


REFER TO NOTE 3
TO ADJUST LOCK/UN-LOCK
RESISTANCE

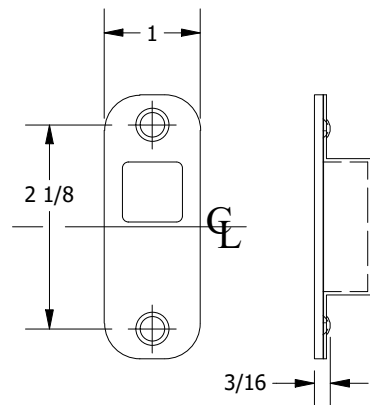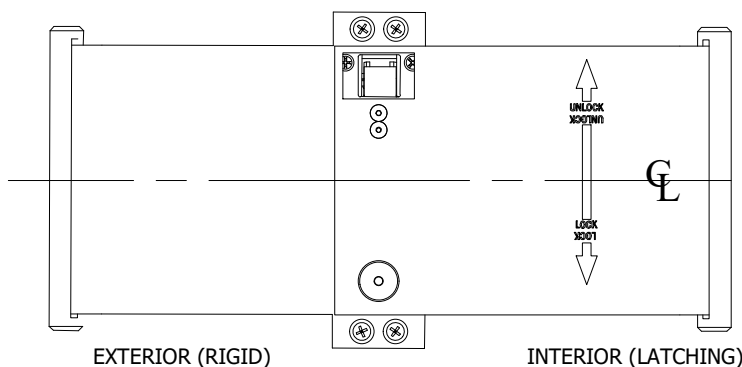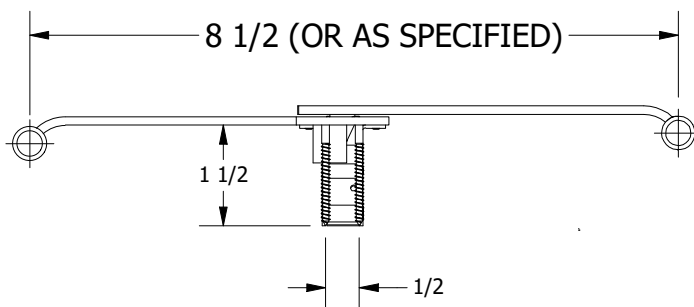**LH SHOWN
FRONT VIEW**

STRIKE & STRIKE BOX
1069FP POCKET DOOR PULL

TEMPLATE# 19575
SHEET
1 OF 3
REVISION# 1

This template is provided for use only on the job for which it was requested. Trimco reserves the right to make design changes without notice. Trimco will not be responsible for errors or damage caused by the use of out-of-date templates.

TRIANGLE BRASS MANUFACTURING
 1351 ROCKY POINT DRIVE
 OCEANSIDE, CA 92056
 WWW.TRIMCOHARDWARE.COM

APPROVED ON: 4/8/2021




Trimco
SINCE 1949

PRODUCT:

1069FP POCKET DOOR PULL FULL PRIVACY

**PREP FOR STRIKE
IN WOOD FRAME**

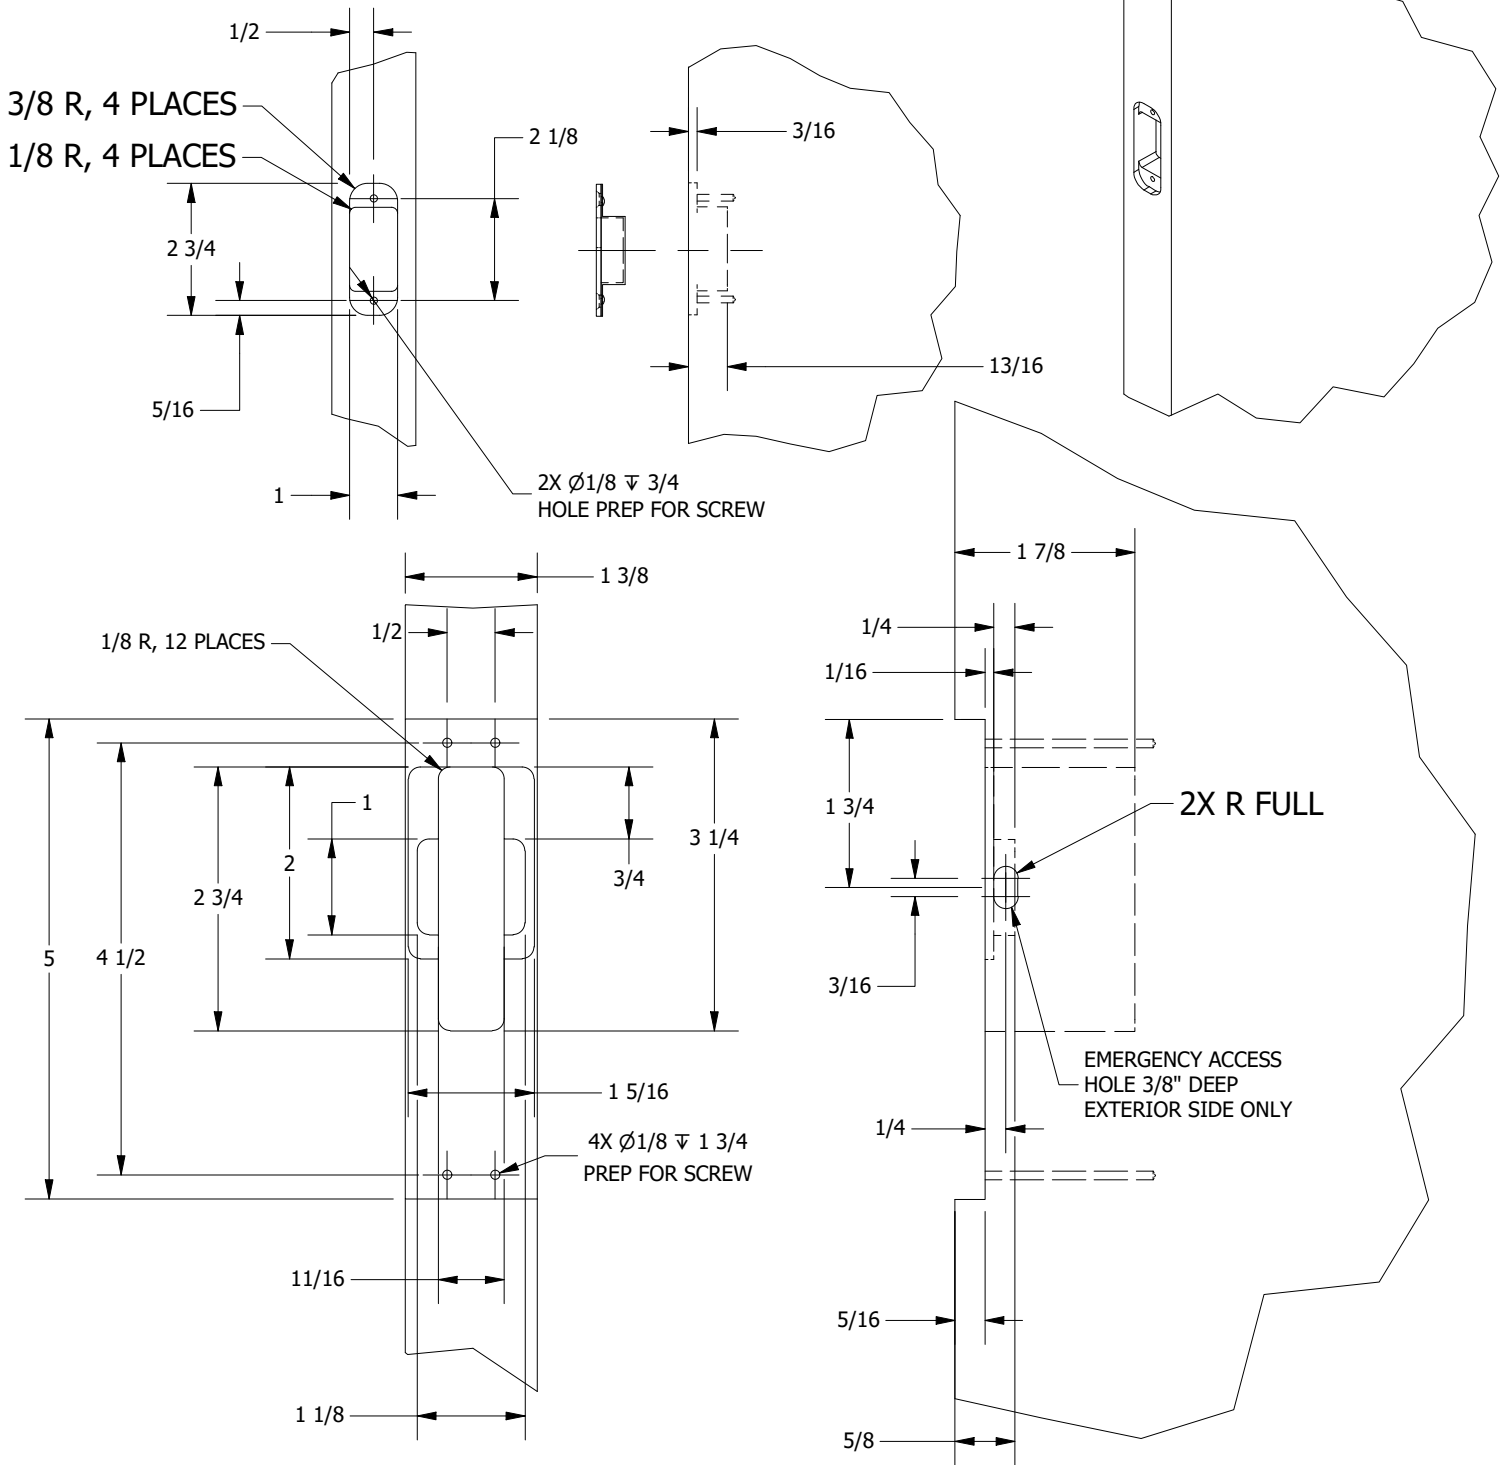

DOOR PREP FOR 1-3/8" WOOD DOOR OR WIDER - CENTER PATTERN IN DOOR THICKNESS

TEMPLATE# 19575

SHEET

2 OF 3

TRIANGLE BRASS MANUFACTURING
1351 ROCKY POINT DRIVE
OCEANSIDE, CA 92056
WWW.TRIMCOHARDWARE.COM


REVISION# 1

This template is provided for use only on the job for which it was requested. Trimco reserves the right to make design changes without notice. Trimco will not be responsible for errors or damage caused by the use of out-of-date templates.


APPROVED ON: 4/8/2021

**TO DETERMINE THE HANDING ON THE 1069FP,
CONSIDER THE FOLLOWING:**


1. THE RIGID HANDLE ON THE 1069FP IS ON THE EXTERIOR.
2. THE LATCHING HANDLE (THAT LOCKS THE DOOR) IS LOCATED ON THE INTERIOR SIDE.
3. CLOSE THE POCKET DOOR.
4. IF THE DOOR SLIDES TO THE RIGHT TO OPEN, AND YOU ARE OUTSIDE, THEN THIS IS A RIGHT HANDED SLIDING DOOR.
5. IF THE DOOR SLIDES TO THE LEFT TO OPEN, AND YOU ARE OUTSIDE, THEN THIS IS A LEFT HANDED SLIDING DOOR.

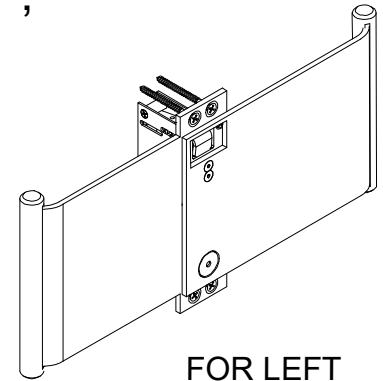

**FOR LEFT
HANDED DOOR**

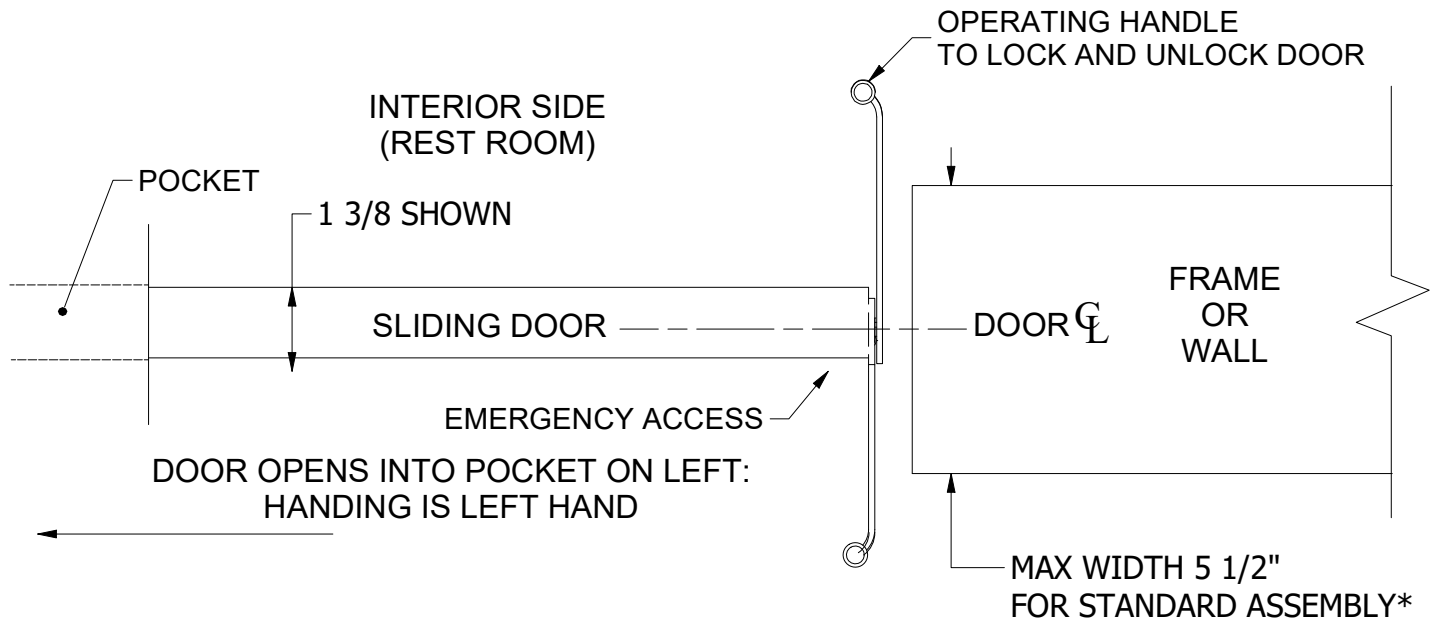

SUGGESTED LABEL LOCATION

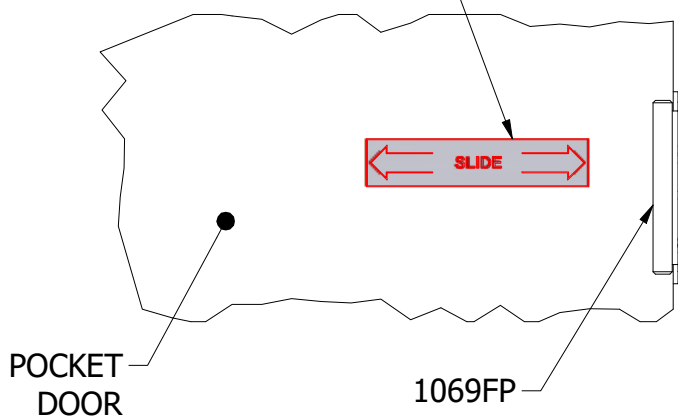

* CUSTOMIZED ASSEMBLIES CAN BE MADE FOR WIDTH'S GREATER THAN 5 1/2"

HANDING IS REQUIRED SO THAT THE OPERATING HANDLE IS ON THE INTERIOR SIDE SO WHEN USED WILL LOCK THE DOOR

NOTE: THE EMERGENCY ACCESS IS ALSO LOCATED ON THE EXTERIOR SIDE NEXT TO THE RIGID HANDLE

TEMPLATE# 19575

SHEET

3 OF 3

REVISION# 1

This template is provided for use only on the job for which it was requested. Trimco reserves the right to make design changes without notice. Trimco will not be responsible for errors or damage caused by the use of out-of-date templates.

TRIANGLE BRASS MANUFACTURING
1351 ROCKY POINT DRIVE
OCEANSIDE, CA 92056
WWW.TRIMCOHARDWARE.COM

APPROVED ON: 4/8/2021